

GOLDEN WHEEL

No.000001

CS-471	1-NEEDLE, TOP & BOTTOM FEED, LONG CYLINDER BED, LOCKSTITCH MACHINE FOR EZTRA HEAVY-WEIGHT MATERIALS WITH A SEMI-ROTARY LARGE-CAPACITY SHUTTLE
---------------	---

Please read this Instruction Manual carefully before using the unit in order to get the most out of it and to enjoy using it for a long time.

INSTRUCTION MANUAL

Please keep this Instruction Manual at hand taking care not to lose it.

BEFORE OPERATION


1. Do not the machine even for trial before lubricating it.
2. Confirm that the voltage and phase (single or 3-phase) are correct by checking them againt the ratings shown on the nameplate.
3. When running your machine for the first time after the set-up, check the rotational direction of the handwheel.
 - Turn ON the power switch. Run the machine at a low speed while checking the rotational direction of the handwheel.(The handwheel should turn counterclockwise as observed from the handwheel side.)
4. For the first month, run the machine at a speed of 600 s.p.m. or less.

CAUTIONS IN OPERATION

1. Keep your hands away from the needle when you turn ON the power switch or while the machine is operating.
2. During operation, be careful not to allow your or any other person's head or fingers to come close to the handwheel, V belt, bobbin winder or moter. Also, do not place anything close to them.
3. Do not run the machine with the finger guard, belt cover or any other protectors removed. Eye guard is option.
4. Be sure to turn OFF the power switch and confirm that the motor is completely stopped before removing the V belt.
5. Never remove the sewing machine from the table with the moter removed from the table.

SPECIFICATIONS


Usage	Pouches, bags, shoes, bag handles, safty belts, etc.	Needle to used	Schmetz 794Nm230
		Needle system	Nm130~Nm280
Sewing speed	Max.800s.p.m.	Thread	#00~#8
Stitch length	Max.11mm	Stitch adjusting method	Lever nut type
Lift of presser foot	Hand lifter 12mm	Lubrication method	Hand oiling
	Knee lifter 20mm	Motor to be used	3-phase/single phase 400W clutch motor(4P)
Thread take-up lever	Cam-type thread take-up lever		
Needle bar stroke	56mm		

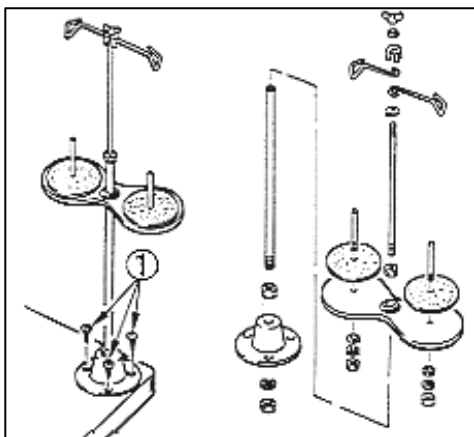

1] INSTALLING THE THREAD STAND


Assemble the thread stand, and install it to the right-hand side of the far side of the table with screws

① (at 3 places).

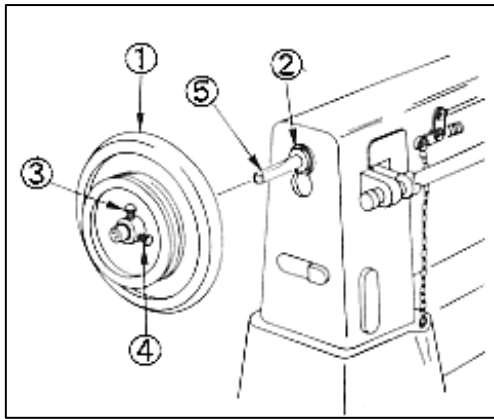


2] INSTALLING THE HANDWHEEL

1. Fit handwheel ① close to the main shaft bushing, rear ②.
2. Align the handwheel with thread groove ⑤ in the main shaft. Tighten the first screw ③ of the hand-wheel, then tighten screw ④.

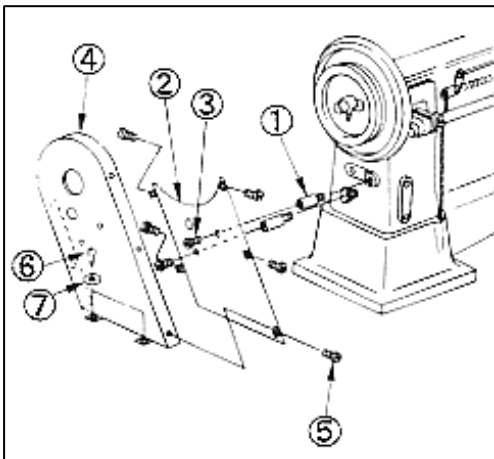

3] INSTALLING THE BELT COVER

1. Install two belt cover supports ① to the machine arm.
2. Install belt cover B ② to belt cover supports ① using screws ③.
3. Attach belt cover A ④ to belt cover B ② using screws ⑤.
4. Fix belt cover A on the table using wooden screw ⑥ and washer ⑦.

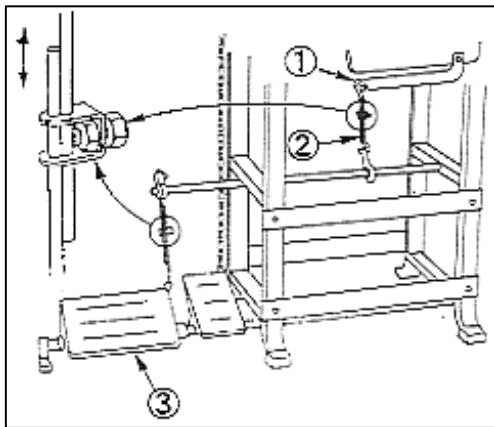

4] ADJUSTING THE PEDAL

◆ Installing the connecting rod

Install connecting rod ② in place so that connecting rod ② is at right angles to motor control lever ①. Connect the connecting rod with pedal adjusting plate ③ so that the rod is also at right angles to the pedal.

◆ The angle of the pedal

The tilt of the pedal can be changed freely by adjusting the length of the connecting rod. To change the tilt of the pedal, loosen the adjusting screw and advance or retract the connecting rod.





5] CLEANING

Waste thread, dust, dirt, etc., build-up around the feed dog or the shuttle may cause malfunction of the machine.

Clean periodically according to your frequency of use.


1. Clean around the feed dog after removing the throat plate.
2. Clean the inside of the shuttle race body by taking out the shuttle body after removing the cover of the shuttle race body.

6] LUBRICATION

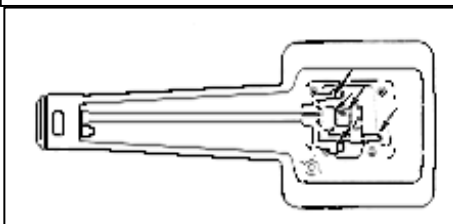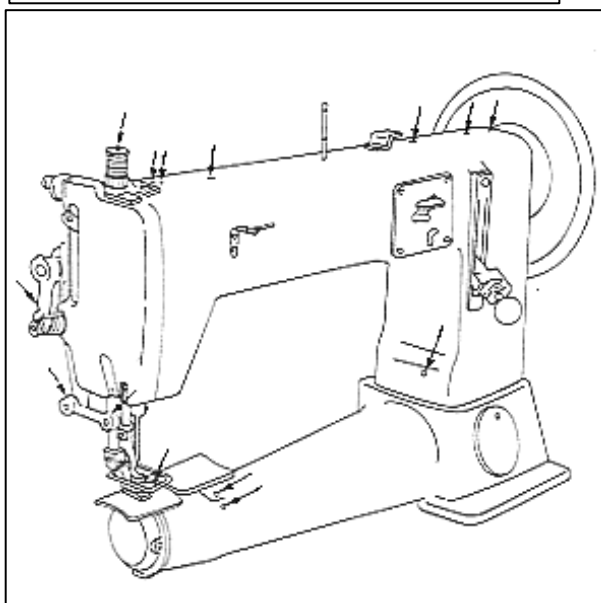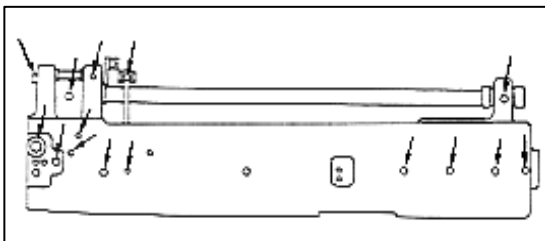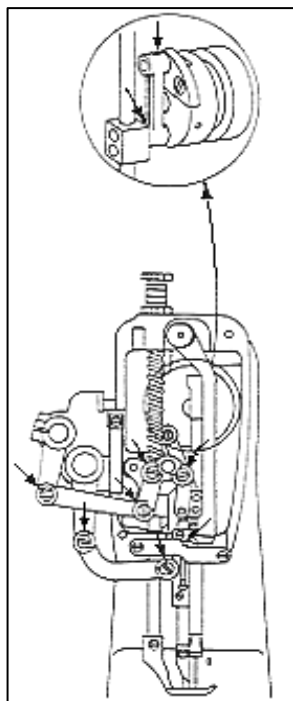

←Lubricate the sections need to be lubricated through two holes in the side plate.

1. After uncrating, supply oil to the machine after cleaning it thoroughly.
2. When oiling all the sections requiring lubrication, after installation of the machine has been completed, wait for a while (approximately 10 minutes) so that oil can penetrate each section sufficiently before starting continuous operation.
3. To operate the machine continuously, apply two three drops of oil each section noted with an arrow mark in the above figure whenever starting operation in the morning and in the afternoon.

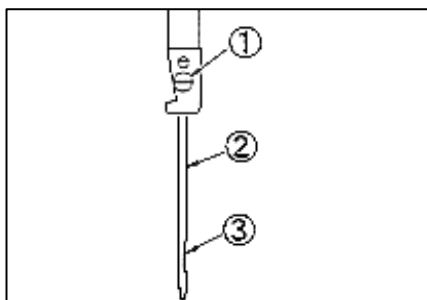


7] HOW TO INSTALL THE NEEDLE

◆ **Be sure to power -off the motor.**


The standard needle is a Schmetz 794, however an Orgar DY × 3 can be used.

1. Turn the handwheel by hand and raise the needle bar to its top position.
2. Loosen screw ① and insert the needle ② into the hole until it will go no further.
(Insert the needle with its recess ③ facing directly to the right-hand side)
3. Securely tighten the screw in the needle.

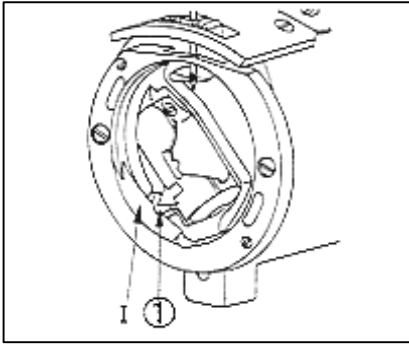


8] HOW TO TAKE OUT THE BOBBIN

1. Turn the handwheel by hand (until the needle bar comes down to the lowest point of its stroke) so that case retaining spring ① in the shuttle body comes to recess to I in the cover of the shuttle race body.

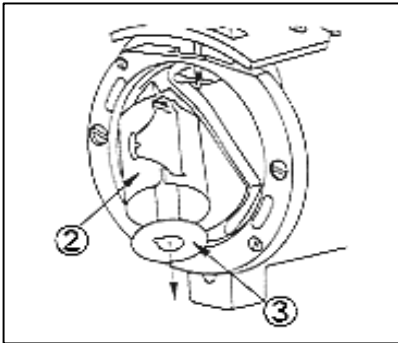

2. When the case retaining spring is pressed, the bobbin case ② will be opened and the bobbin ③ will pop out of the case.

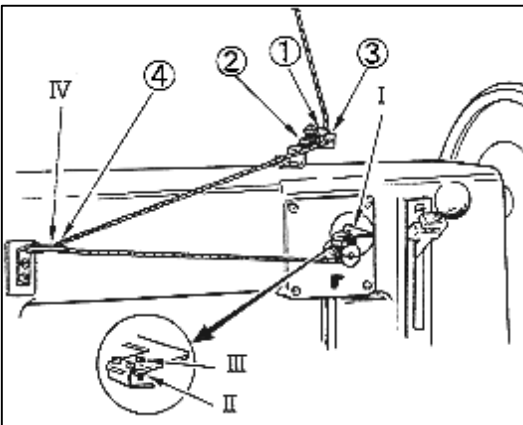

9] HOW TO WIND A BOBBIN THREAD


1. Raise the presser foot by the hand lifter lever.
2. Insert the bobbin into the bobbin winder spindle.
3. Thread the winder in the order illustrated and wind the thread onto the bobbin four or five turns.
4. Push the bobbin winder trip latch I down and the bobbin starts rotating to wind bobbin thread with the machine operated.
5. When winding of bobbin thread has been completed, the winder trip latch will be disengaged and the bobbin will stop automatically.

◆ Adjusting the amount of thread wound round the bobbin

That amount of thread has already been adjusted so that thread can be wound round approximately nine-tenths of the bobbin. If the amount is excessive or insufficient, adjust:

1. by loosening the adjusting screw and nut II .
2. by turning the adjusting screw III .
To decrease the amount, turn clockwise.
To increase the amount, turn counterclockwise.
3. After adjusting the amount of thread has been completed, tighten the nut to secure firmly.


- ◆ If bobbin thread is wound unevenly, move the bobbin winder thread guide IV forward and backward so that thread can be wound evenly.

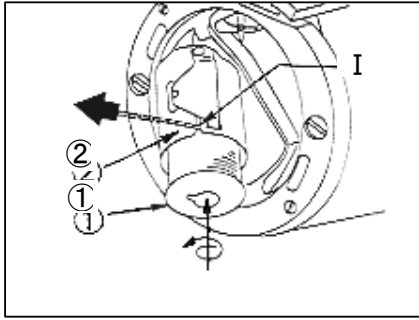


10] HOW TO INSTALL THE BOBBIN

1. After pulling out thread approximately 10 cm from bobbin ①, put the bobbin into bobbin case ②.
2. Pass the thread through the threading groove I in the bobbin case.

CAUTION: Fit the bobbin in the bobbin case so that the bobbin turns in the direction of the arrow when the bobbin thread is pulled.

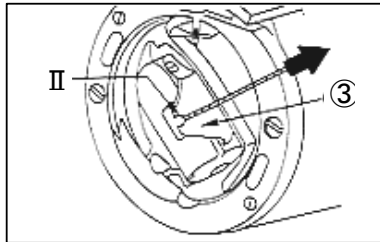


3. Pass the thread through thread slit II and pull it up. Then the thread can be passed under the thread tension spring ③ and pulled out.
4. Push the bobbin case into the original position of holding the bobbin.

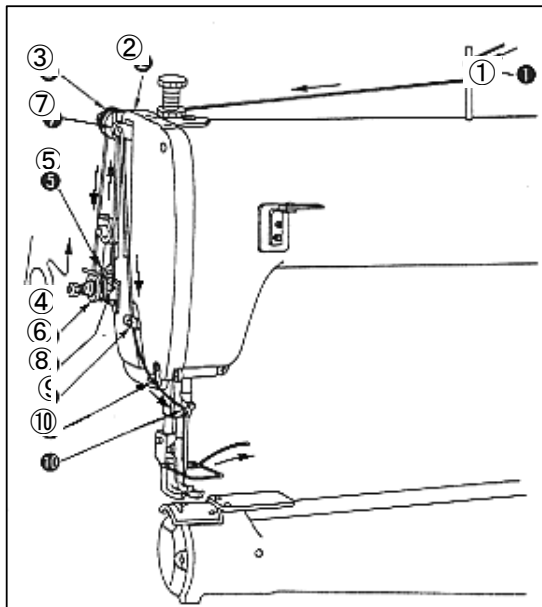

11] HOW TO THREAD THE MACHINE HEAD

1. Turn the handwheel by hand to move the thread take-up lever to its top position.
2. Thread in the order illustrated and thread the needle from the left to the right.
3. Pull out the thread, which has been threaded in the needle, approximately 10 cm.

CAUTION: Thread the right-hand side of section ⑧ when viewed from the face plate.

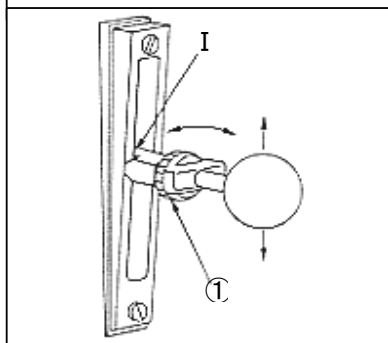

12] ADJUSTING THE STITCH LENGTH AND REVERSE STITCHING

◆ Adjusting the stitch length

To adjusting the stitch length, use the feed regulator nut ①.

Align the upper end I of the feed lever to the scale indicating the desired amount.

To increase the pitch, turn the nut counter-clockwise.



To decrease the pitch, turn the nut clockwise.

(To decrease the stitch length, turn the nut while slightly pushing the feed lever down.)

◆ Reverse stitching

To carry out reverse stitching, push the feed lever up by hand as far as it will go.

Reverse stitching can be done only when the feed lever is pushed up.

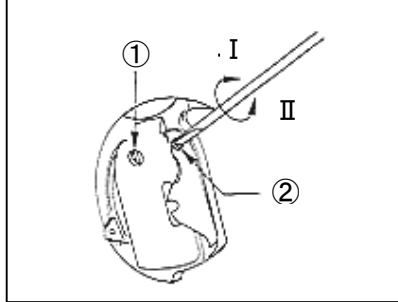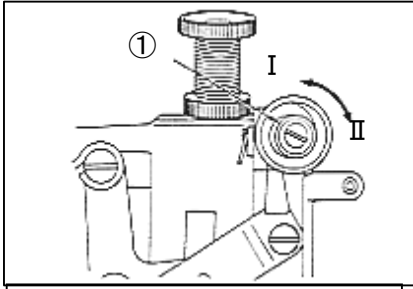

13] THREAD TENSION

◆ Adjusting the needle thread tension

Adjusting the needle thread tension by thread tension nut ①.

To increase the needle thread tension, turn the nut to the clockwise I .

To decrease the needle thread tension, turn the nut to the counterclockwise II .

◆ Adjusting the bobbin thread tension

To adjust the bobbin thread tension


1. Loosen screw ①.

2. Adjust the bobbin thread tension by turning screw ②.

To increase the bobbin thread tension, turn the screw to the clockwise I .

To decrease the bobbin thread tension, turn the screw to the counterclockwise II .

3. After the bobbin thread tension has been adjusted, tighten screw ① firmly.

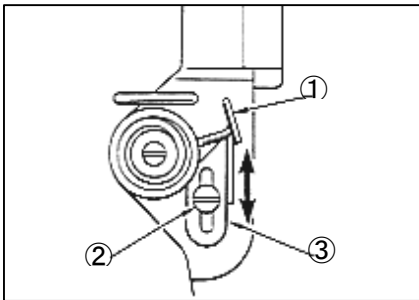

14] THE THREAD TAKE-UP SPRING


The standard stroke of thread take-up spring ① is 8 to 15 mm.

To adjust the operating range;

1. Loosen screw ②.

2. Adjust the operating range by moving the take-up spring adjusting plate ③ up and down.

3. After adjustment has been completed, tighten screw ② firmly.

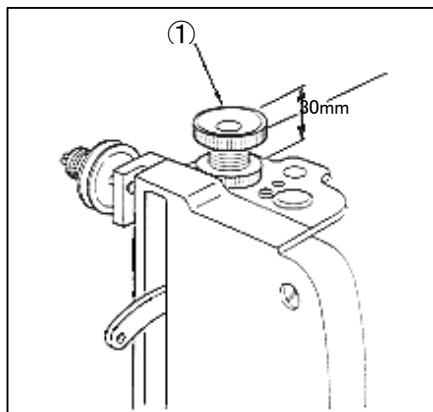

15] ADJUSTING THE PRESSER FOOT PRESSURE

The standard height of presser spring regulator ① is 30mm above the main unit surface.

The presser foot pressure for the presser foot and walking foot can be adjusted according to the material to be sewn.


To adjust the presser foot pressure

1. Loosen the presser spring regulator nut.

2. Turn the presser spring regulator clockwise to increase the pressure of the presser foot, or counterclockwise to decrease it.


3. After adjustment has been completed, turn the nut firmly, making sure to keep it securely in place.

• Use a minimum amount of required pressure.

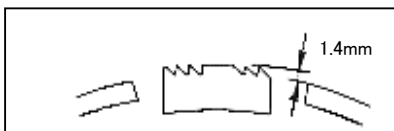


16] ADJUSTING THE HEIGHT OF THE FEED DOG

The advance amount of the feed dog from throat plate has already been adjusted to 1.4mm.

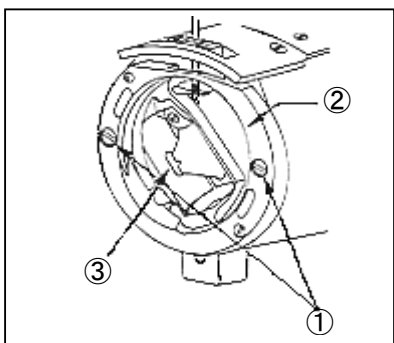


To adjust the height of the feed dog according to the sewing condition given.

1. Remove two screws ① in the shuttle race, and remove shuttle race ②. Then remove shuttle ③.

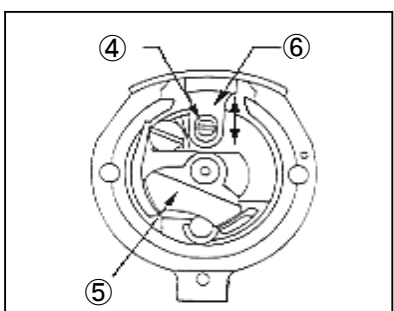


2. Turn the handwheel to move shuttle driver ⑤ until screw ④ in the feed dog appears.
3. Loosen screw ④ in the feed dog, and adjust the height of the feed dog by moving feed dog ⑥ up or down.
4. After the adjustment, firmly tighten screw ④ in the feed dog.

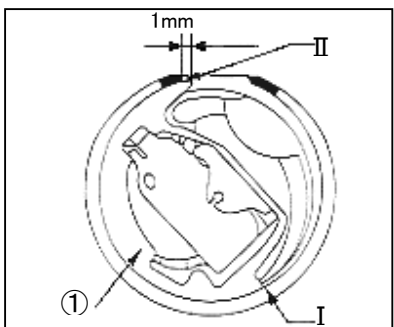

17] ADJUSTING THE NEEDLE-TO-SHUTTLE RELATIONSHIP


◆ The position of the shuttle when it is recessed most.

When shuttle ① turns counterclockwise until it will go no further and the shuttle and the shuttle race come in contact with each other at point I, a distance of 1mm should be provided between the blade point of the shuttle and end face II of the shuttle race.

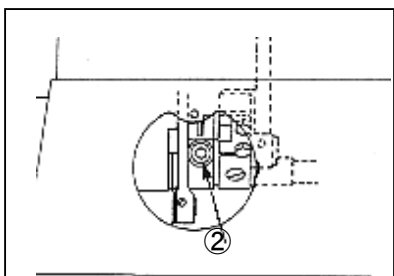


To adjust the position of the shuttle being pulled:

1. Turn the handwheel and stop turning when the shuttle turns counterclockwise until it will go no further.
2. Loosen screw ②.
3. Align the blade point of the shuttle by turning the shuttle by hand.
4. After adjustment has been completed, tighten screw ② firmly.

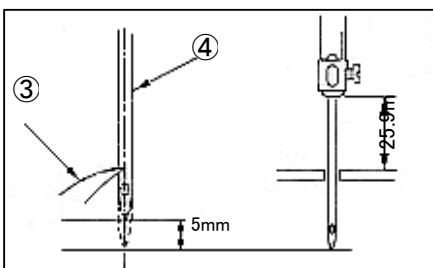


◆ Positioning the needle and shuttle

Turn the handwheel to make the needle bar ascend 5 mm from its lowest position. At this time, blade point ③ of the shuttle should be aligned with the center of needle ④.
(Reference value of the lowest position of the needle bar stroke)
The distance from the upper surface of the throat plate to the lower end of the needle bar should be 25.9 mm with the feed pitch set to 0 mm.

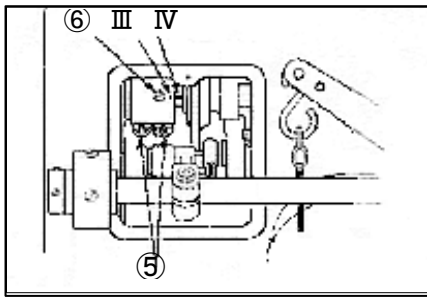


To adjust the position of the needle and shuttle

1. Loosen screw ⑤.
2. Loosen screw ⑥, and adjust so that marker dot III engraved on the eccentric cam of the vertical rod is aligned with marker line IV engraved on the main shaft. Then, tighten screw ⑥.
3. Turn the handwheel toward you, and check the lifting amount of the needle bar.
4. After the adjustment, securely tighten screws ⑤ and ⑥.

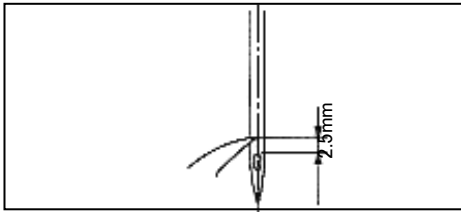


◆ The height of the needle bar

The correct height is that the distance from the blade point of the shuttle to the upper end of the needle eyelet is 2.5 mm when the blade point of the shuttle is aligned with the center of the needle.

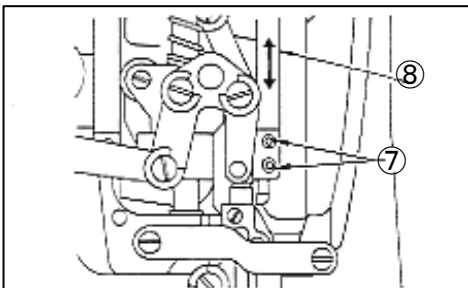

To adjust the height of the needle bar

1. Set the feed pitch to 0 mm.
2. Turn the handwheel and stop turning it when the blade point of the shuttle is aligned with the center of needle.
3. Loosen screws ⑦.
4. Adjust the height by moving needle bar ⑧ up and down.
5. After adjustment has been completed, firmly tighten screw ⑦.

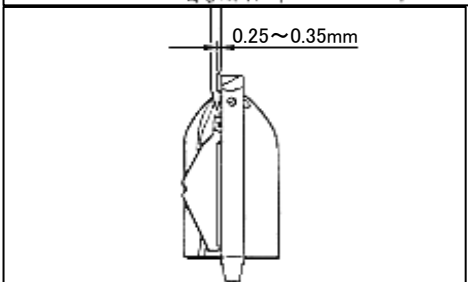


◆ The needle-to-shuttle clearance

The clearance between the recess in the needle and the blade point of the shuttle has already been adjusted to 0.25 ~0.35 mm.


Point of the shuttle has already been adjusted to 0.35 mm. Adjust the clearance between the needle and the shuttle by replacing the shuttle race back.

(The shuttle race back comes in six different thickness in addition to the standard thickness.)

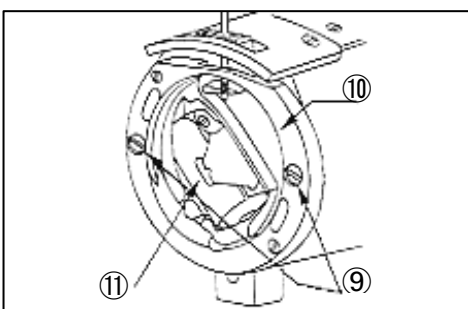


To replace the shuttle race back

1. Remove two screws ⑨ in the shuttle race, remove shuttle race ⑩, and remove shuttle ⑪.

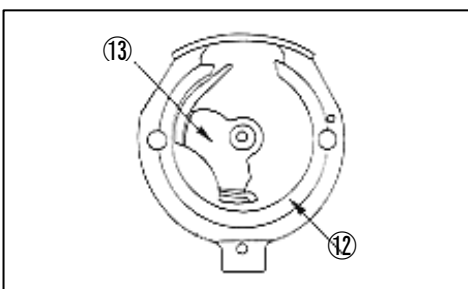


2. Turn the handwheel until shuttle driver ⑬ is brought to the position where shuttle race back ⑫ comes off. Then replace the shuttle race back.

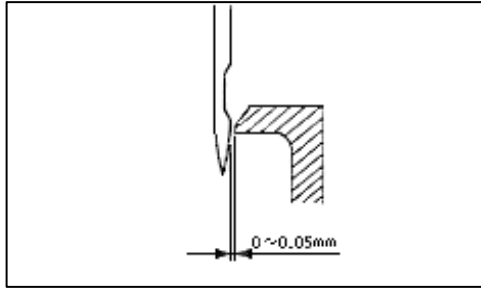


◆ **Clearance between the needle and the shuttle driver**

The clearance between the needle and the needle guide of the shuttle driver has already been adjusted to the range of 0 through 0.05 mm.

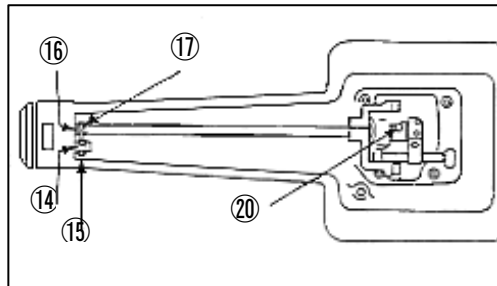


To adjust the clearance between the needle and the shuttle driver:

1. Loosen two screws (15), and remove thrust collar (14) of the feed rock driving shaft on the feed bracket.
2. Loosen two screws (17), and move thrust collar (16) of the feed rock shaft.
3. Loosen two screws (18) in the shuttle driving shaft through collar, screw (19) in the shuttle driving shaft front bushing and small pendulum clamping screw (20).

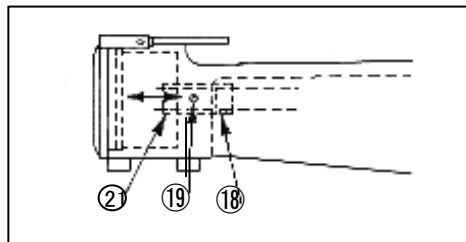


4. Adjust the clearance by moving shuttle driving shaft front bushing (21) to the left and right.
5. After the adjustment has been completed, secure the shuttle driving shaft thrust collar and the small pendulum clamping screw making sure there is no axial play of the shuttle driving shaft.
6. Finally, secure the respective thrust collars, making sure there is no play in the feed driving shaft and the feed rock shaft.

The standard for adjusting the clearance between the needle and the blade point of the shuttle

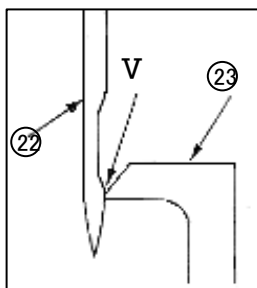


Use a standard Schmetz 794-Nm 230 needle.

1. Adjust the clearance V between the convex section of the needle (22) and shuttle driver (23) to 0.

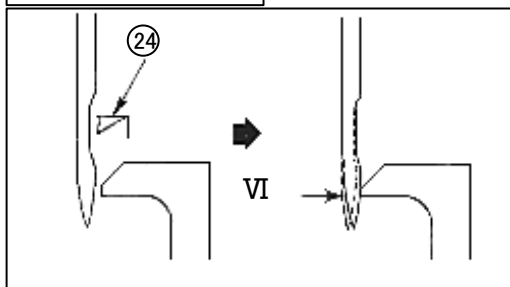


2. Align the needle center with the blade point of the shuttle (24) and press the VI section of the needle against the shuttle driver.

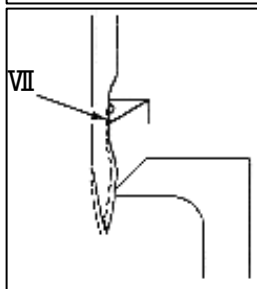

3. Adjust the clearance VII to a minimum, with the needle pressed against the shuttle driver, making sure that the needle does not contact the blade point of the shuttle.

• By this adjustment the needle-to-shuttle blade point clearance will be 0.25 ~ 0.35 mm.

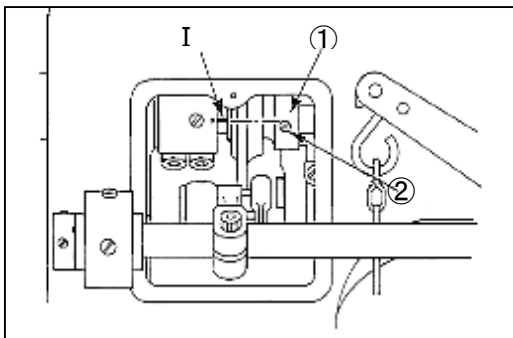


18] THE FEED DOG-TO-NEEDLE RELATIONSHIP

As standard timing of the feed dog, when the center of the needle aligns with the blade point of the shuttle with the feed pitch set to "0", the feed dog should move from right to left by 1 mm when observed from the face plate by moving the feed lever from the position to set the normal feed pitch to the maximum value to the position to set the reverse feed pitch to the maximum value.

◆ To adjust the timing:

1. Loosen the two screws for the feed eccentric cam (1).
2. Adjust the timing to the standard one by aligning the top end of screw (2) in the feed eccentric cam with marker line I engraved on the main shaft.
3. After adjusting the timing has been completed, firmly tighten the two screws for the feed eccentric cam.

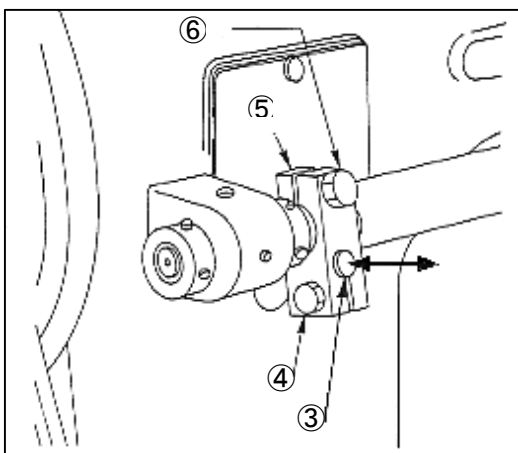


◆ The motion of the feed dog and needle

The center of the needle hole in the feed dog must move with synchronized completely with the needle.


< How to adjust the needle sway >

If there is any lag in the motion of the feed dog and that of the needle, and the needle entry at the sewing end is not same as that at the sewing start, perform the following adjustment.

1. Loosen clamping screw (4) in center shaft rear arm (3).
2. Move center shaft rear arm (3) toward/away from you and temporarily tighten the screw. At this time, move center shaft rear arm (3) away from you to decrease the oscillating width of the needle bar frame, or pull the arm toward you to increase it.
3. Slowly turn the handwheel by hand to confirm that there is no lag between the motion of the feed dog and that of the needle.
4. Repeat the above stated steps until the feed dog and the needle move with completely synchronized.
5. After the adjustment, firmly tighten screw (4).

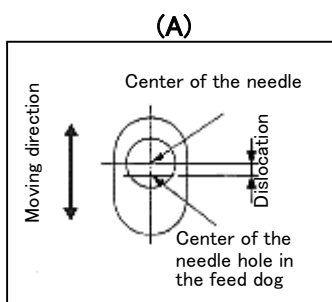

Dislocation in the moving direction


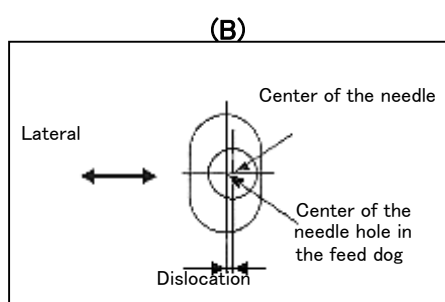


Dislocation in lateral direction

◆ Needle entry point with respect to the needle hole in the feed dog

If the needle fails to enter just the center of the needle hole in the feed dog even when the motions of the feed dog and the needle are completely synchronized.

1. Check whether the needle is bent.
2. Check the direction of the dislocation either (A) or (B) as illustrated in the figure.

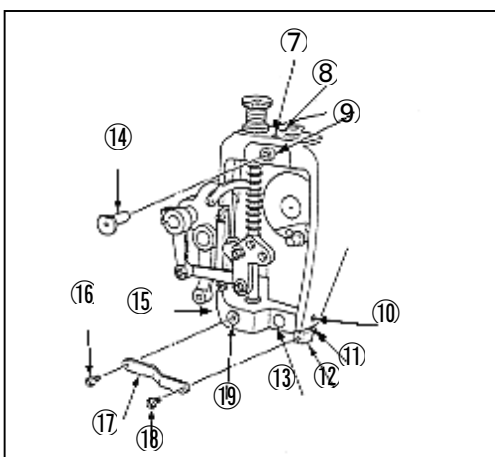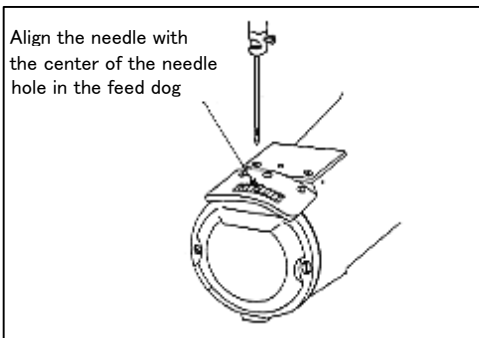

◆ Adjusting the needle entry point

(A) When the needle entry point dislocates in the moving direction.

1. Loosen clamping screw ⑥ in center shaft rear ⑤.
2. Align the needle with the center of the needle hole in the feed dog.
3. After the adjustment, firmly tighten the screw.

(B) When the needle entry point dislocates in the lateral direction.

1. Remove the screw in the face plate, and remove the face plate.
2. Remove screws ⑬ and ⑭, and remove needle bar frame presser plate ⑰.
3. Loosen screw ⑩ to allow needle bar frame guide ⑬ to move freely.
4. Loosen screws ⑦ and ⑧, and move needle bar frame shaft bushing ⑨ until the needle is aligned with the center of the needle hole in the feed dog.
5. Loosen screw ⑦, and retain needle bar frame shaft bushing ⑨ so that needle bar frame shaft ⑭ is secured at that position.
6. Make needle bar frame guide ⑬ come in slight contact with the needle bar frame, and fix the guide at that position by tightening screw ⑩.
7. Loosen screws ⑪ and ⑮, and position needle bar frame presser retaining shaft ⑲ and needle bar frame presser retaining plate ⑫ to the position where the needle bar frame moves smoothly without play when needle bar frame presser plate ⑰ is attached to the needle bar frame. Then tighten the screws.

(Caution)

After the needle entry point has been adjusted, be sure to confirm the clearance between the needle and the blade point of the shuttle as well as the clearance between the needle and the finger. (Refer to pages 8,9 for how to adjust these clearances.)

19] THE MOTOR PULLEY AND THE V-BELT


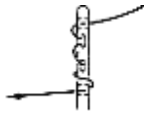

Sewing speed of the machine (s.p.m.)	4 P			
	50Hz		60Hz	
	Motor pulley O.D	Belt length	motor pulley O.D	Belt length
600	65mm	55inches	55mm	54inches
800	85mm	56inches	70mm	55inches

1. Use an M-type motor pulley and V-belt.
2. The relationship between the motor pulley/belt length and the sewing speed of the machine is shown in the table on the above.

(Caution) When using a single phase motor, use belts of 1 inch longer than those shown in the table on the above.

GOLDEN WHEEL

CHEE SIANG INDUSTRIAL CO., LTD
No.32, Wu Chuan 7th Road, Wu Ku Industrial Area,
Wu Ku Hsiang 24248, Taipei Hsien, Taiwan.
Tel: 886-2-2999518 Fax: 886-2-2999519

Problem	Cause	Corrective measures
1. Thread often breaks or thread splits finely, correct stitch cannot be formed (half-finished stitch)	<ul style="list-style-type: none"> ① Flaw is found out at thread path, needle point, shuttle blade point, or needle eyelet. ② Improper finish around the recess in the needle. ③ Excessively tightened needle thread tension. ④ The needle interferes with the blade point of the shuttle. ⑤ The timing of the needle and the shuttle is too early or too slow. ⑥ Due to heat generated by the needle. ⑦ Excessive height difference at stepped section. 	<ul style="list-style-type: none"> ○ Remove flaw by smoothing flaw with fine paper file. ○ Replace the needle with a new one. ○ Adjust the needle thread tension. ○ Refer to "17.Adjusting the needle-to-shuttle relationship". ○ Refer to "17.Adjusting the needle-to-shuttle relationship". ○ Decrease the sewing speed of the machine. Use silicone oil. ○ Increase the amount of movement of the thread take-up spring.
2. Stitches are frequently skipped	<ul style="list-style-type: none"> ① The needle-to-shuttle blade point clearance is excessive. ② The timing of the needle and the shuttle is too early or too slow. ③ The presser bar pressure is insufficient. ④ The distance from the upper end of the needle eyelet to the blade point of the shuttle is not proper. ⑤ The needle is improperly selected. ⑥ The amount of movement of the thread take-up spring is excessive. ⑦ Overheated needle or shuttle. Thread is not pulled smoothly. ⑧ Reverse stitching is made at low speed on light weight material using nylon thread. 	<ul style="list-style-type: none"> ○ Refer to "17.Adjusting the needle-to-shuttle relationship". ○ Refer to "17.Adjusting the needle-to-shuttle relationship". ○ Tighten the presser adjuster screw. ○ Refer to "17.Adjusting the needle-to-shuttle relationship". ○ Replace the needle with a one-count lower needle. ○ Decrease the amount of movement of the thread take-up spring. ○ Use silicone oil. ○ Wind the needle thread around the needle. 
3. Improper thread tension, irregular stitch, excessive bobbin thread tension	<ul style="list-style-type: none"> ① Poor finish of the thread path. ② The bobbin slides unsmoothly. ③ Weak bobbin thread tension. ④ Bobbin thread is wound too tightly. ⑤ Needle thread flaps.(Needle thread flaps and comes out of the thread tension disc due to excessive needle thread tension or is caught in other parts.) ⑥ Too thin bobbin thread is used to combine with needle thread. 	<ul style="list-style-type: none"> ○ Smooth the surface with a fine paper file or using a buff. ○ Replace the bobbin or the shuttle. ○ Adjust the bobbin thread tension. ○ Decrease the tension of the bobbin thread winder. ○ Thread the tension guide bar as illustrated right.  ○ Use silicone oil.
4. Poor gloss of the needle	① Excessive height difference at stepped section	○ Use silicone oil.
5. Inconsistently finished seam(stitches are not made straight but made such as "ㄷ")	① Needle is too thick.	○ Replace the needle with a thinner one. Use cutting point needle 
6. Bobbin thread tension cannot be increased	① The bobbin thread tension spring of the shuttle has become dusty or dirty.	○ Clean by removing the bobbin thread tension spring.
7. The belt slips (Motor stoppage occurs, if an electric-stop motor is used.)	<ul style="list-style-type: none"> ① The V belt is degraded. ② The V belt tension is not enough. 	<ul style="list-style-type: none"> ○ When degradation is found out to the V belt, such as wear, cracking, etc., replace with a new one. ○ Adjust the slack amount in the V belt to 10mm/1kgf. 